

Setup for using the Behringer BCF2000 as controller

17 (1-8)*, 1 (1-8), 2 (1-8), 3 (1-8), 4 (1-8), 5 (1-8), 6 (1-8), 7 (1-8), 8 (1-8), 21 (1-8), 22 (1-8)



(17-24) 16**, 10 (1-8), 11 (1-8), 12 (1-8), 13 (1-8), 14 (1-8), 15 (1-8), (26-33) 16, 25 16***

Use eight presets (pages) on the BCF2000:

* 17 (1-8) = CC17 Channel 1 on page one, CC17 Channel 2 on page two, CC17 Channel 3 on page three etc.

** (17-24) 16 = CC17 Channel 16 on page one, CC18 Channel 16 on page two etc.

*** 25 16 = CC25 Channel 16 on all pages